


Product information

The EasyTrail® bath ramp consists of sections that are 2.5 m long and 1.3 m wide. The landings measure 1.8 m by 1.8 m to provide enough space to turn a wheelchair. The sections are delivered complete from the factory. The only components that need to be installed are the handrails. The stainless steel material is EN 1.4301, and the acid-resistant steel is EN 1.4404. The aluminium decking is EN AW-5754 H114.


During installation, the sections are carried out into the water and connected using a spring-loaded locking mechanism. When removing the ramp, the sections are easily separated above the water using the locking mechanism and an extension tool.



- Spring-loaded locking mechanism that holds the sections together. Opens with an extension tool above the water.
- 120 mm high edge protection.
- Ribbed, non-slip 5 mm thick aluminum plate

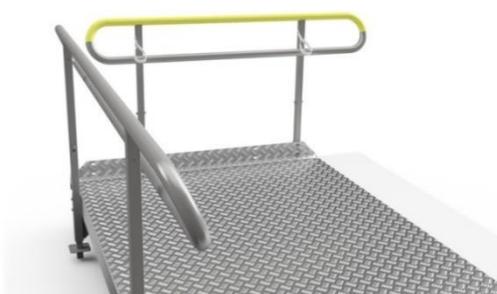

- Handrails with clearance at the posts, positioned at heights of 700 mm and 900 mm from the walking surface.
- Attachment point for crutches and wheelchair during boarding and disembarking.
- Handrail with contrasting color at the exit point.

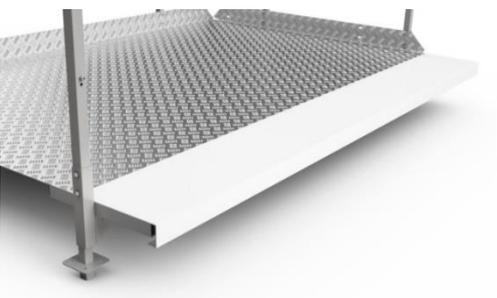

- Telescoping legs with locking mechanism in the post above the water.
- Walking surface edge marked with contrasting color at the exit point.